


Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

ENERGY SUSPENSION®
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

17301
12NOV/13 BRH

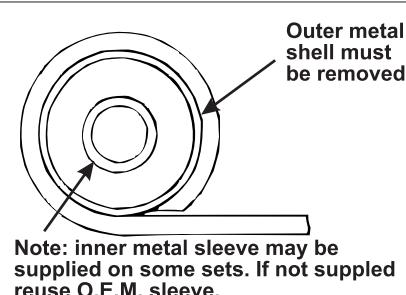

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.


When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)

Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

ENERGY SUSPENSION®
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

17301
12NOV/13 BRH

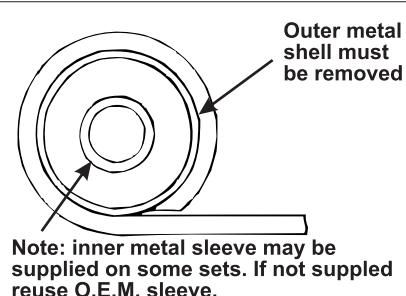

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.


When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)

Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

ENERGY SUSPENSION®
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

17301
12NOV/13 BRH

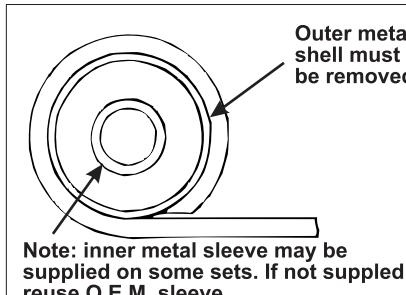

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.


When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)

Universal Installation Instructions for replacing bushings with outer metal shell

© 2013 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

ENERGY SUSPENSION®
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

17301
12NOV/13 BRH

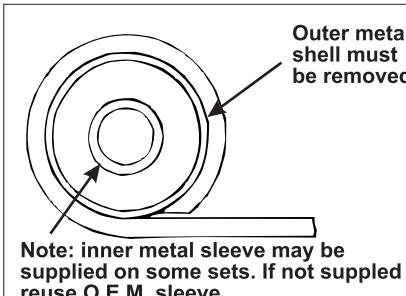

Note: When a sleeve is not used, apply a light coat of grease to the original shoulder bolt.
Remember: The outer metal shell must be removed. Your application may vary in shape and size.

When installing Urethane bushings, apply grease as instructed: Remove the original rubber and outer shell (when used) clean I.D. of any old rubber or rust with sand paper. Apply a light coat to the I.D., O.D. and flange of the bushings. (all surfaces that contact metal) Apply a light coat of grease to the O.D. of the sleeves.)