


177104


Clean scale and any old rubber from casting and bushing cap. Apply a light coat of grease to the I.D. of bushing and the O.D. of bar at bushing mounting areas. Position sliced area of bushing as per drawing at 2 and 10 o'clock in casting. Tighten top and bottom bolts in sequence to factory specifications.

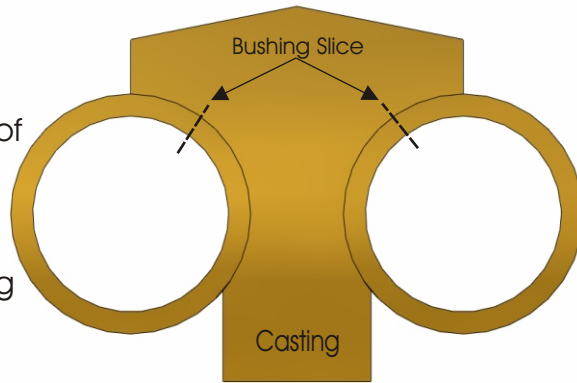

© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

177104


Clean scale and any old rubber from casting and bushing cap. Apply a light coat of grease to the I.D. of bushing and the O.D. of bar at bushing mounting areas. Position sliced area of bushing as per drawing at 2 and 10 o'clock in casting. Tighten top and bottom bolts in sequence to factory specifications.

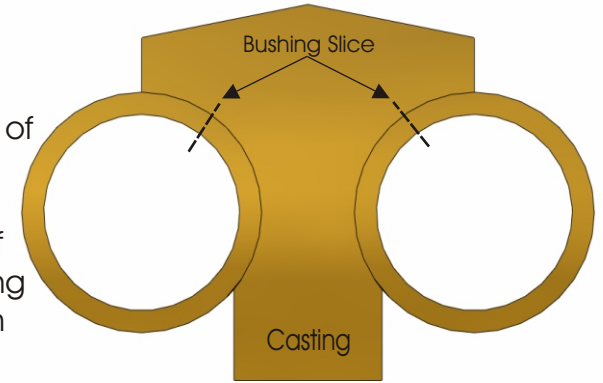

© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

177104


Clean scale and any old rubber from casting and bushing cap. Apply a light coat of grease to the I.D. of bushing and the O.D. of bar at bushing mounting areas. Position sliced area of bushing as per drawing at 2 and 10 o'clock in casting. Tighten top and bottom bolts in sequence to factory specifications.

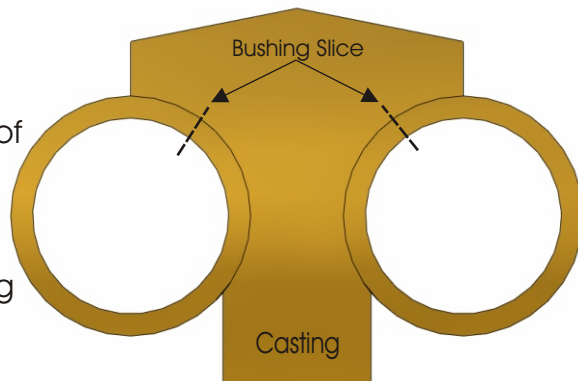

© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

177104

Clean scale and any old rubber from casting and bushing cap. Apply a light coat of grease to the I.D. of bushing and the O.D. of bar at bushing mounting areas. Position sliced area of bushing as per drawing at 2 and 10 o'clock in casting. Tighten top and bottom bolts in sequence to factory specifications.

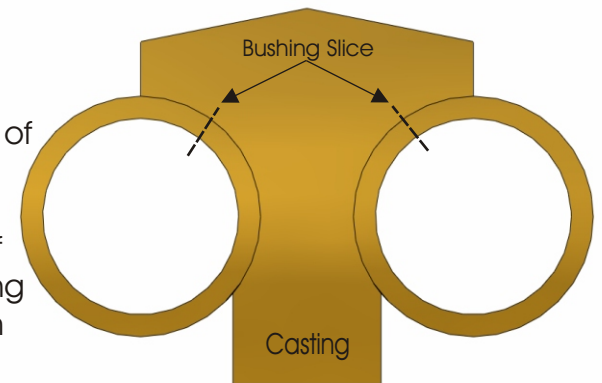

© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.