

Installation instructions

For set # 3.4170

1968-1972 CHEVY CHEVELLE

© 2017 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

ENERGY
SUSPENSION 
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Page 1 of 2

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle. Wheel alignment is almost always disturbed when suspension components are removed or replaced. It is recommended that you have the alignment checked on your vehicle at a qualified alignment shop. Energy Suspension recommends that you read over all the installation instructions and check all P/N's and quantities in the parts list before you start. Call customer service at 949-361-3935 if the parts in your kit do not match this parts list. Prior to installation, make sure that your vehicle is in top mechanical condition and that there are no suspension or steering related problems. This part has been designed to work only with a vehicle that is in good state of repair. No matter how carefully we design our parts, this is one area we have no control over and cannot be held responsible.

PARTS LIST:

- 2 - 4286 CORE POS UPPER
- 2 - 4285 CORE POS LOWER
- 6 - 4287 POS. 2, 4 & 6 UPPER
- 6 - 4288 POS. 2, 4 & 6 LOWER
- 2 - 4289 POS. 7 UPPER
- 2 - 4290 POS. 7 LOWER
- 4 - 4291 POS. 3 & 5 UPPER ONLY
- 8 - 15.02.30.39 WASHER/SLEEVE POS. 2, 4, 6 & 7
- 2 - 15P0608139 WASHER/SLEEVE CORE POS.
- 12 - 15.03.04.39 1-1/8" X 7/16" X .100" FLAT WASHER ALL POS.
- 10 - 15.03.09.39 2.00" X 7/16" X 1/8" FLAT WASHER ALL POS.
- 2 - 15.03.13.39 1-3/4" X 7/16" X 1/8" FLAT WASHER CORE POS.
- 10 - 15.05.54.39 7/16-14 X 2-1/2" BOLT ALL POS.
- 2 - 15.07.02.40 7/16-14 NYLOCK NUT CORE POS.
- 2 - 15P0704342 7/16-14 FLANGED HEX NUT POS. 2

Removal:

Spray all nuts and bolts to be removed generously with your favorite rust buster before removal.

Install mounts one side at a time with bolts on other side loosened only.

The front and rear bumpers may need to be removed. Before removal, scribe match marks on frame to aid with reinstalling the bumper. The battery, battery tray, and coolant overflow tank, may need to be removed to access the front core support mounts. For POS. 2, there is a caged 1" square nut inside the body that might break loose and must be held to keep from spinning while removing the bolt from underneath. There is an access hole on the firewall behind the fender well panel.

Note: When disassembling, note the quantity and positions of any shims that may have been inserted for body alignment. These shims will have to be reused to insure proper body alignment.

Remember: Only raise body high enough to remove & replace mounts. Always watch the fan shroud, brake lines, fuel lines, electrical wires, shift linkage and steering coupler for sufficient clearance when raising the body. When jacking the body use a long enough 2X4 or 4X4 for maximum support. Never put jack directly on body panels.

Torque all bolts to 55 ft.-lbs. or until bolts bottom out on sleeves.

17559

15/AUG/10 BO
8/8/2013 KL.B
30/JAN 2020 JGB ECN 19076 REV. D


Installation instructions

For set # 3.4170

1968-1972 CHEVY CHEVELLE

© 2017 Energy Suspension. All rights reserved.
 May not be reproduced, in any form, or by any means,
 without the written consent of Energy Suspension.

ENERGY SUSPENSION
 1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

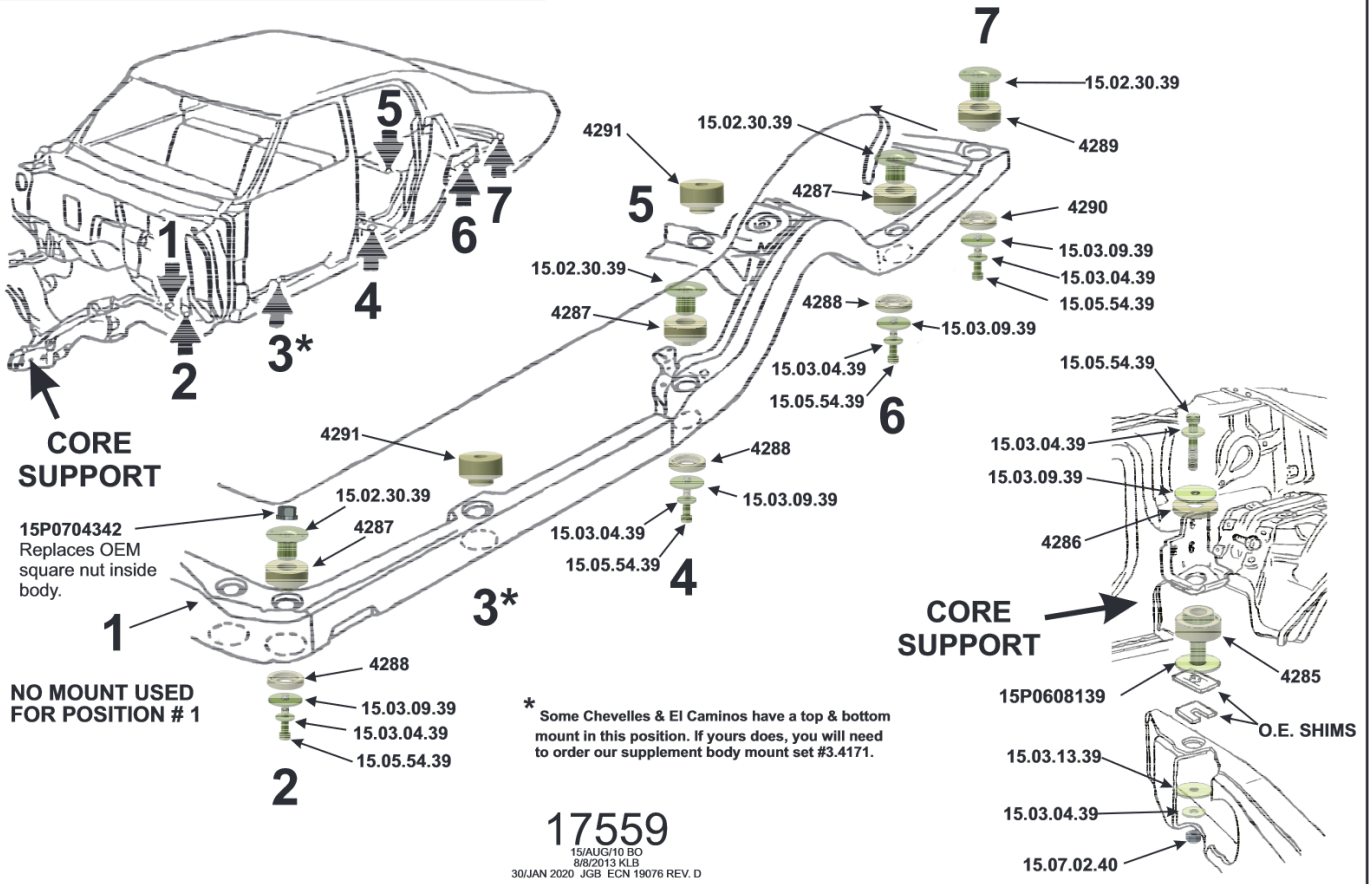

CORE SUPPORT

15P0704342
 Replaces OEM square nut inside body.

NO MOUNT USED FOR POSITION # 1

* Some Chevelles & El Caminos have a top & bottom mount in this position. If yours does, you will need to order our supplement body mount set #3.4171.

17559
 15/AUG/10 BO
 8/8/2013 KLB
 30/JAN 2020 JGB ECN 19076 REV. D

CORE SUPPORT

O.E. SHIMS