

# INSTRUCTION SHEET FOR SET #3.5213

Read this instruction sheet thoroughly before initiating any work!

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's Polyurethane.




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2006 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

Remove both endlink assemblies from each side of the sway bar. With the bar "free-floating", remove one sway bar bushing and bracket at a time and replace with the Energy Suspension supplied bracket and bushing. Don't forget to use the supplied washers when installing the OEM bolts back in thru the Energy brackets. The endlinks are the basic layout except they use a SMALLER washer on the bottom position which fits inside a pocket on the lower control arm. The pocket is small and the #15.03.29.39 washer scrapes the sides, so we have to use the #15.03.01.39 washer in this lower position.

## PARTS LIST:

- 2 - 5356 Sway Bar Bushing (Ø1.390" I.D.)
- 4 - 15.03.69.39 (0.812"x0.406"x0.100") washer
- 2 - 15.08.16.39 Sway Bar Bracket
- 2 - 15.03.01.39 (1.250"x0.385"x0.110") washer
- 6 - 15.03.29.39 (1.500"x0.375"x0.090") washer
- 2 - 15.05.07.39 (3/8"-16 x 9" long) bolt
- 2 - 15.07.01.40 (3/8"-16 nylock nut)
- 2 - 15.10.375.39 (0.562"x0.375"x4.250") sleeve
- 8 - 8078 Endlink bushing
- 1 - 17479 Instruction Sheet

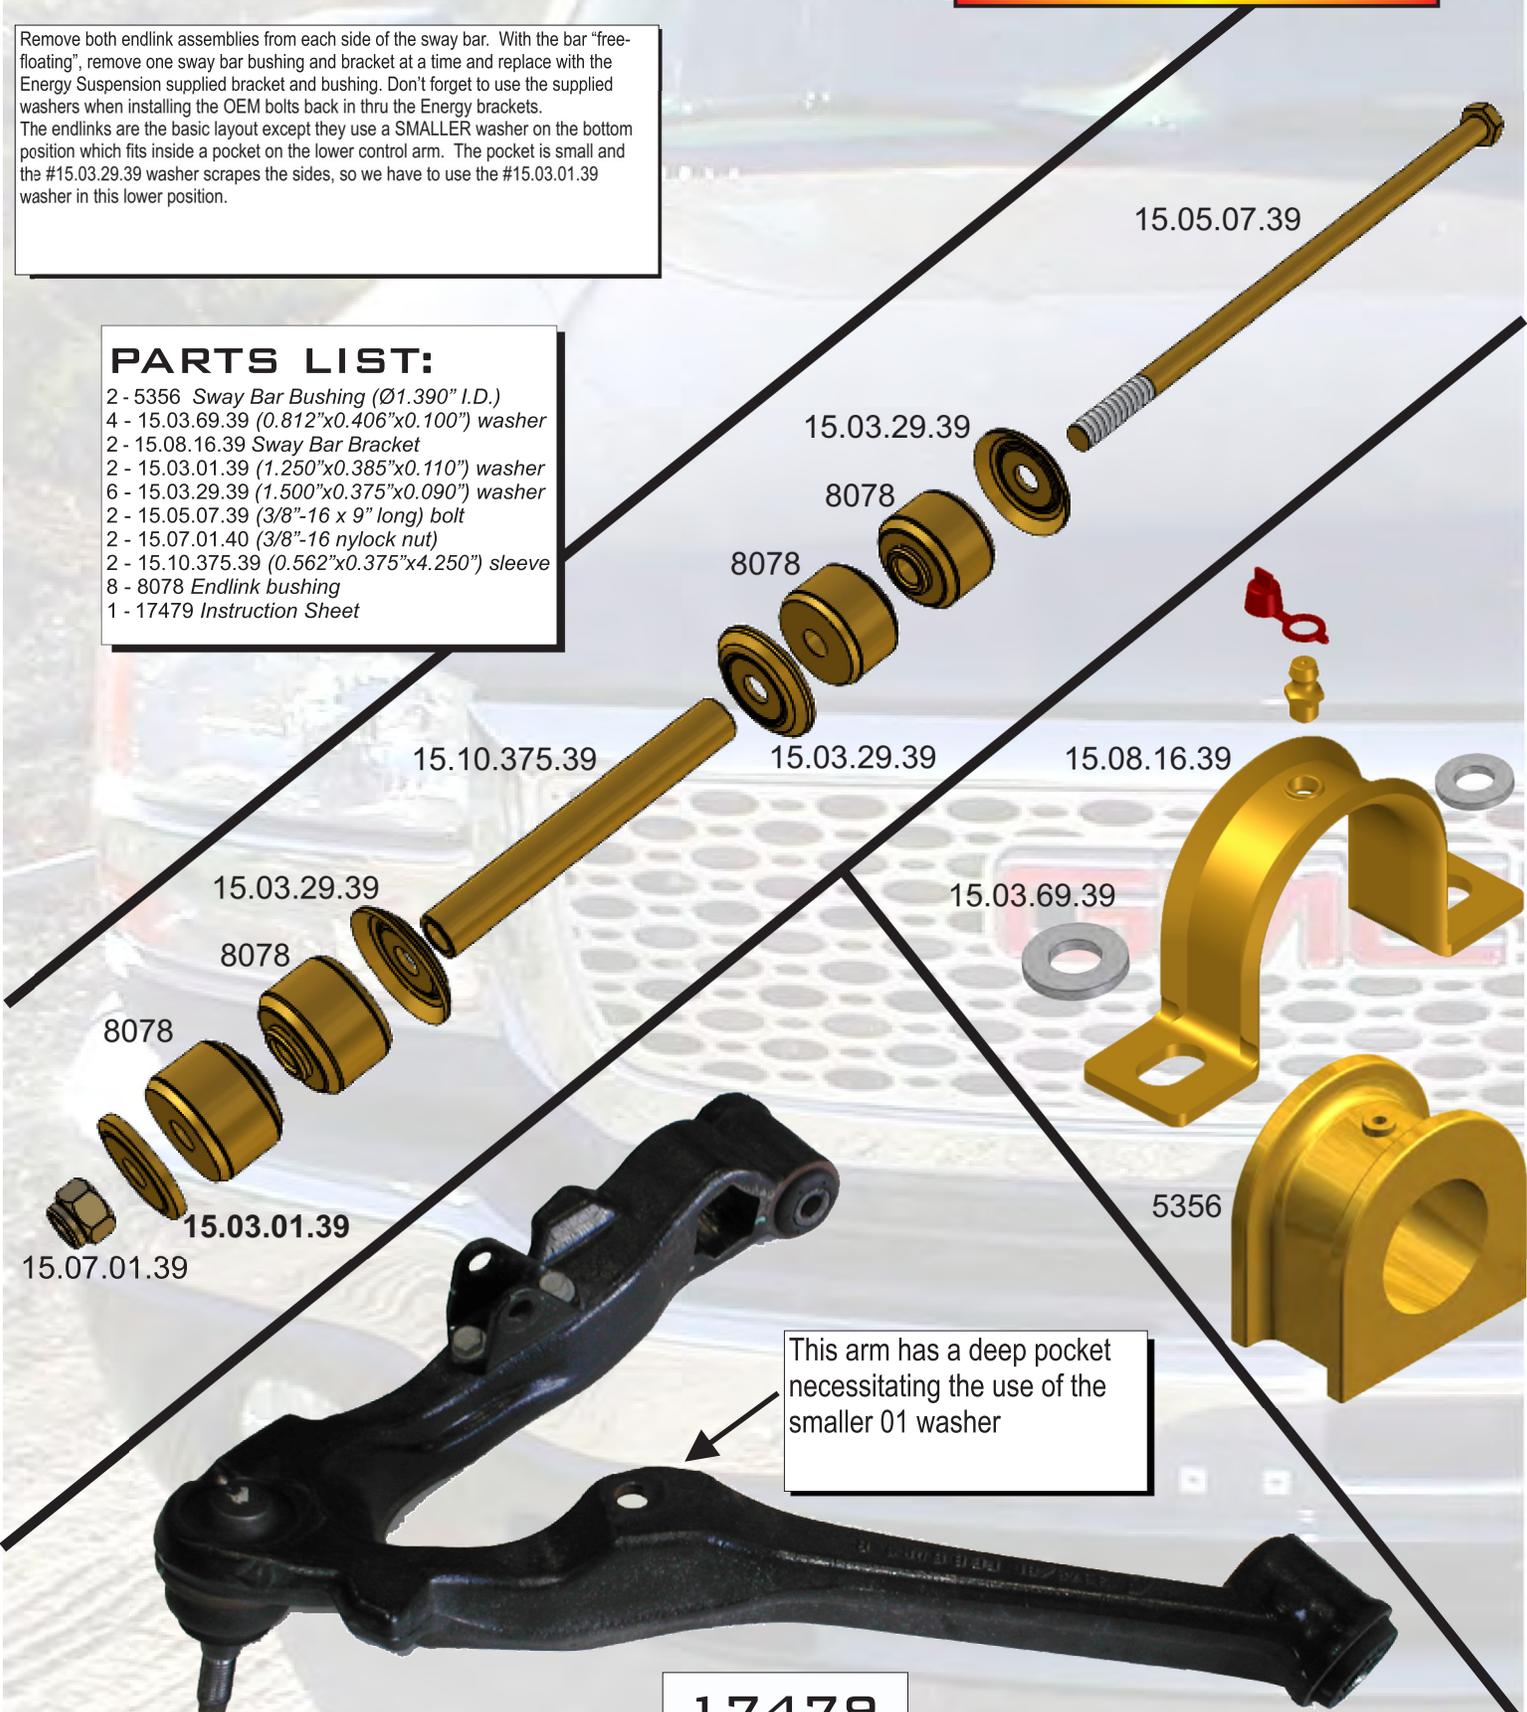

This arm has a deep pocket necessitating the use of the smaller 01 washer