

Installation Instructions

For Set # 8.7107 & 8.7108
Front or Rear Track Rod Bushing Set
91-97 Toyota Land Cruiser



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673


© 2020 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle. Wheel alignment is almost always disturbed when suspension components are removed or replaced. It is recommended that you have the alignment checked on your vehicle at a qualified alignment shop. Energy Suspension recommends that you read over all the installation instructions and check all P/N's and quantities in the parts list before you start. Call customer service at 949-361-3935 if the parts in your kit do not match this parts list. Prior to installation, make sure that your vehicle is in top mechanical condition and that there are no suspension or steering related problems. This part has been designed to work only with a vehicle that is in good state of repair. No matter how carefully we design our parts, this is one area we have no control over and cannot be held responsible.


Rear Track Rod Shown Front Track Rod Similar.

Parts list: 8.7107 Rear track rod bushing set.
2 - 08P08438 (Track rod bushing)
2 - 15P1074039 Rear Sleeve.
(1.125"O.D. x .640"I.D. x 1.960"LG).
1 - 17P17730 (this instruction sheet).

Parts list: 8.7108 Front track rod bushing set.
2 - 08P08438 (Track rod bushing)
2 - 15P1074239 Front Sleeve
(1.125"O.D. x .718"I.D. x 1.960"LG)
1 - 17P17730 (this instruction sheet).

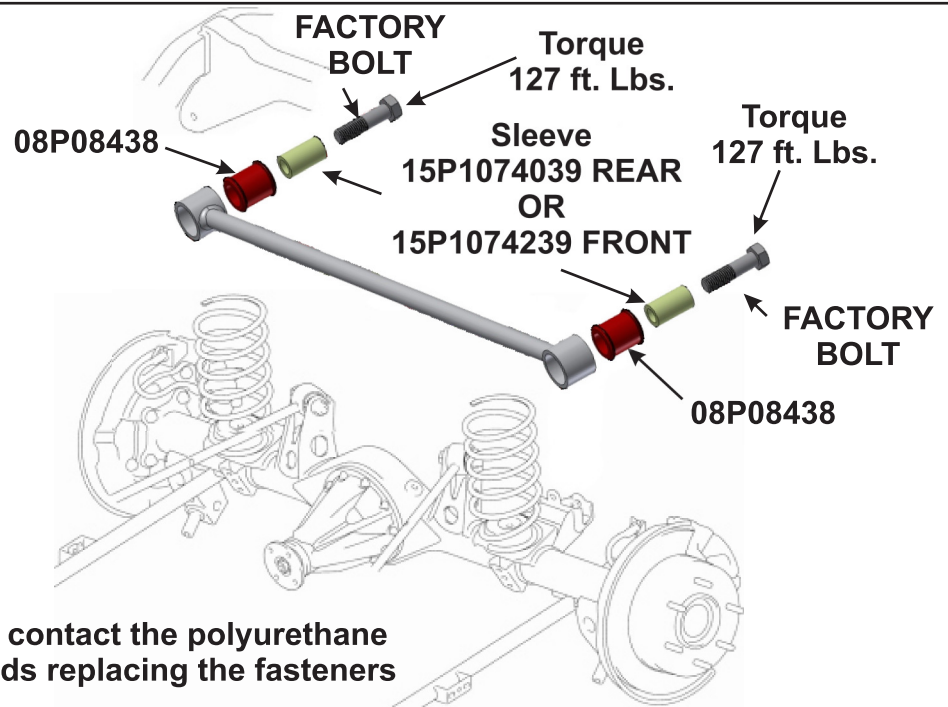

Apply grease to all metal parts that contact the polyurethane bushings. Manufacturer recommends replacing the fasteners with new nut and bolt.

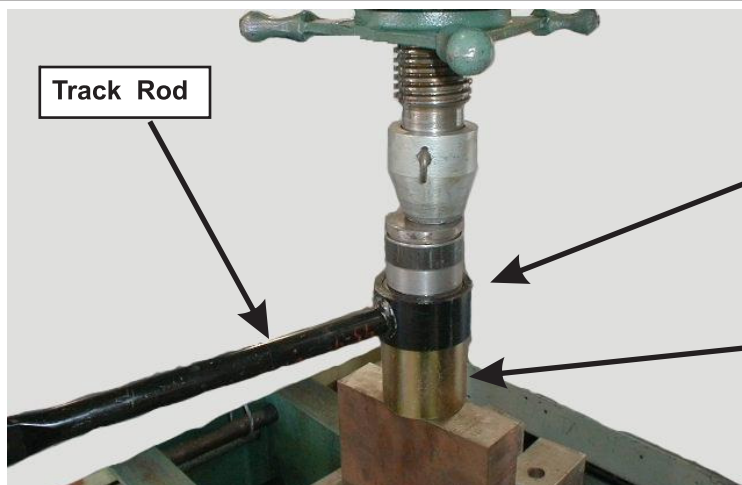

Inside Diameter of track rod is 1.570" (39.8mm). Push out old bushing with something smaller than 1.570" (39.8mm).

The inside of receiver needs to be bigger than 1.570" (39.8mm).

The old rubber bushing has an outer metal shell that must be pressed out. When pressing out the original bushing, you need to push it with something smaller than the inside diameter of the track rod. And the receiver end needs to be bigger than the outside diameter of the old bushing being pushed out.

17P17730

21/20 BRH ECN 20001