


Installation Guide

Front lower Control Arm—Front & Rear Bush

Suits : Toyota Aurion GSV40R (06–0N)
: Toyota Camry ACV40 (06–0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

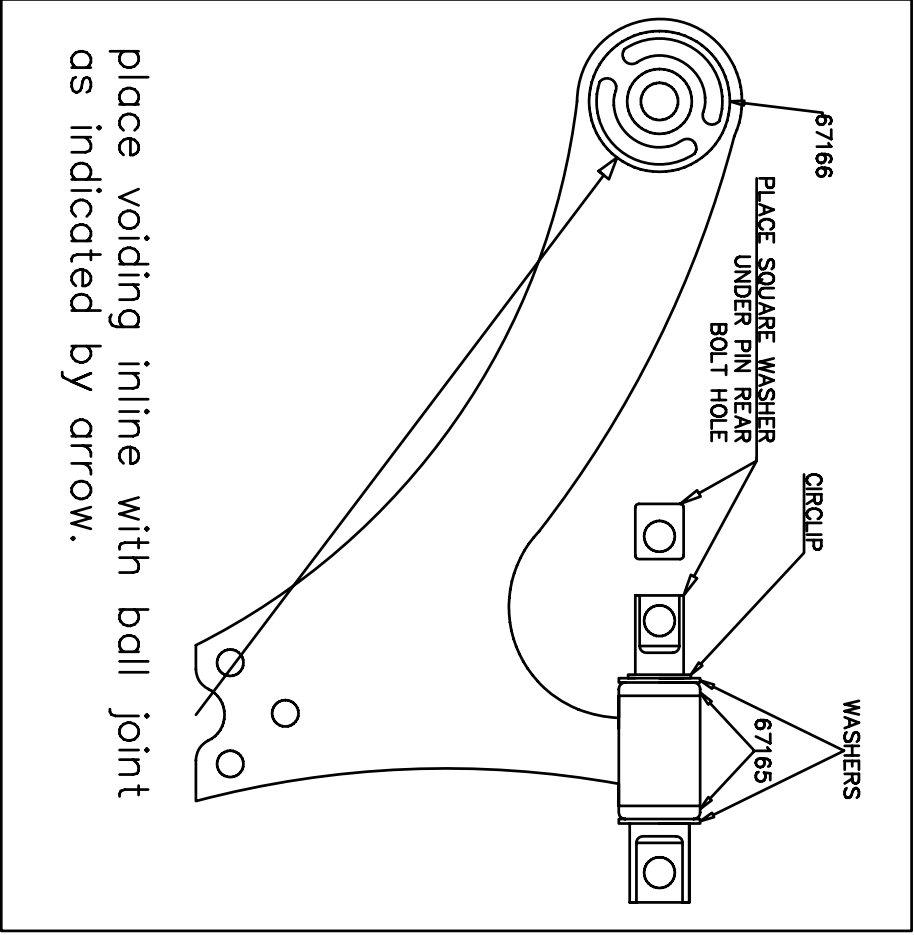

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.


Installation Guide

Front lower Control Arm—Front & Rear Bush

Suits : Toyota Aurion GSV40R (06–0N)
: Toyota Camry ACV40 (06–0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

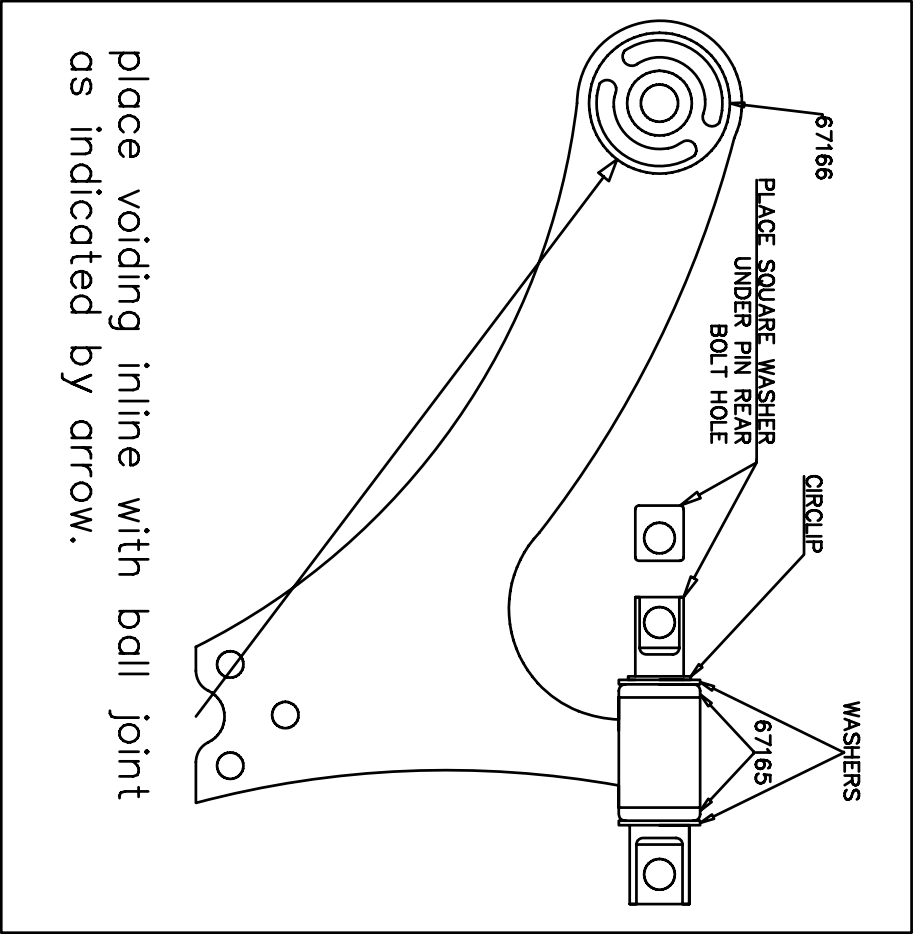

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.