


# Installation Guide

## Front lower Control Arm—Front & Rear Bush

Suits : Toyota Aurion GSV40R (06-0N)  
: Toyota Camry ACV40 (06-0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

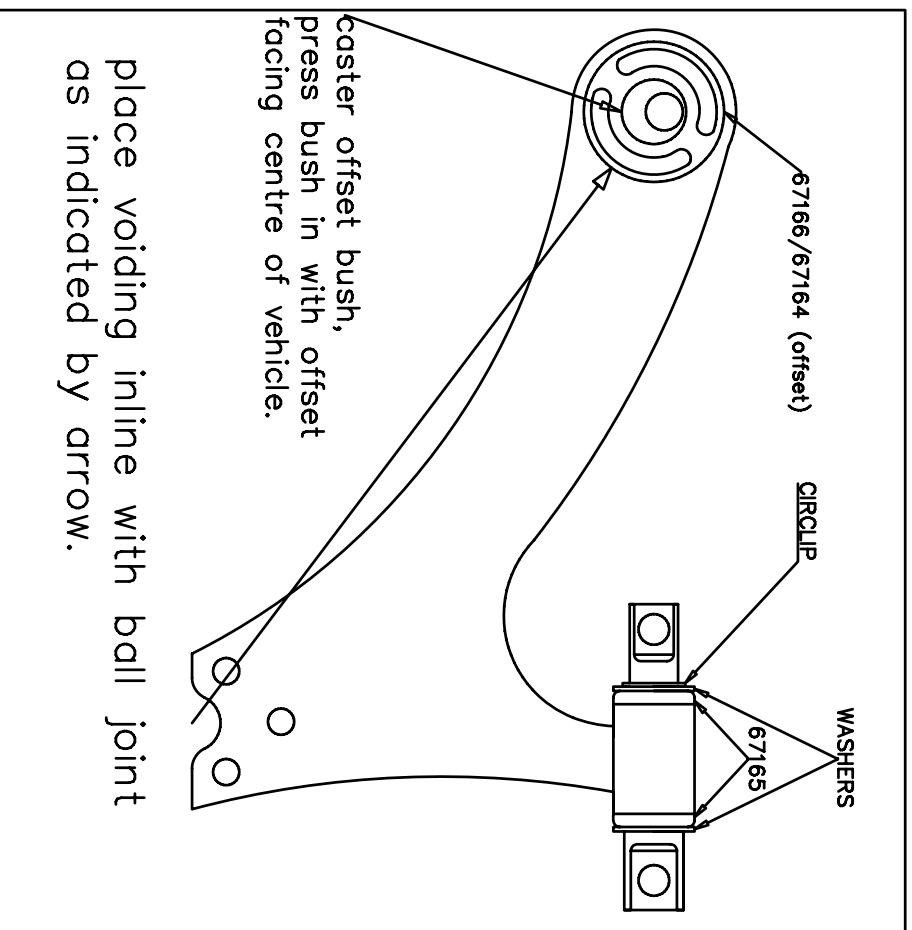

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.


# Installation Guide

## Front lower Control Arm—Front & Rear Bush

Suits : Toyota Aurion GSV40R (06-0N)  
: Toyota Camry ACV40 (06-0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

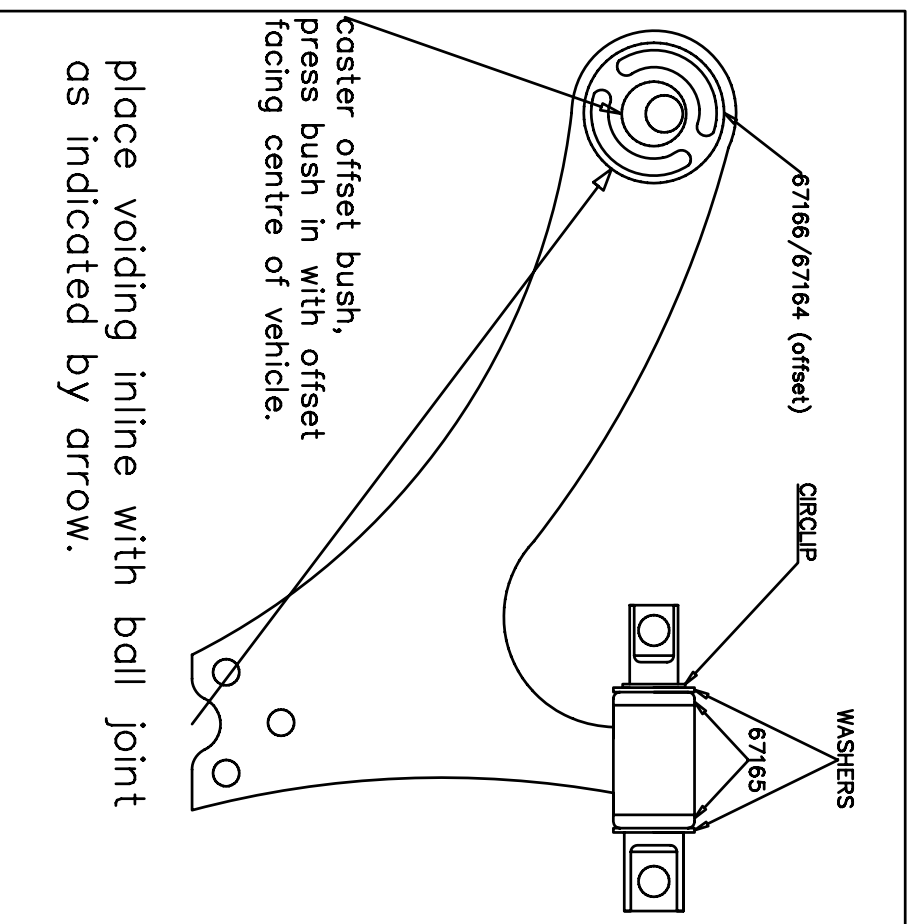

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.