

Z5140


Installation Guide

Front lower Control Arm—Front & Rear Bush

Suits : Toyota Corolla ZRE140 (05/07-0N)
: Toyota Corolla ZRE150 (05/07-0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

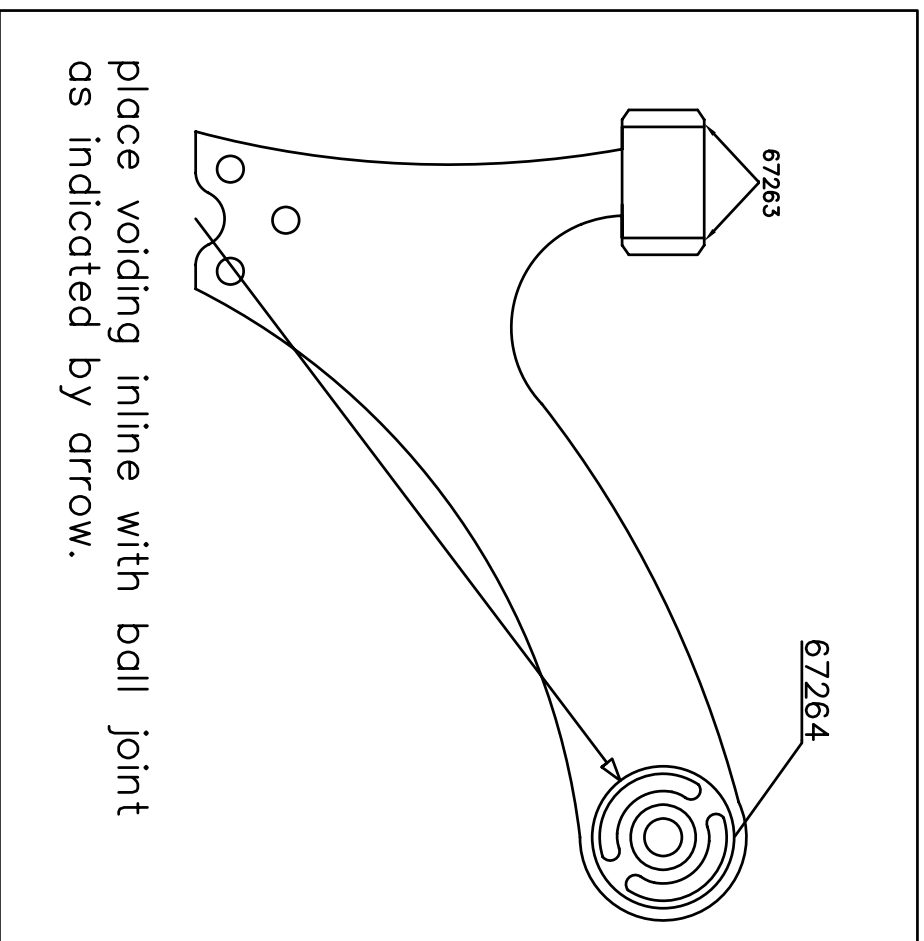

place voiding inline with ball joint
as indicated by arrow.

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Z5140


Installation Guide

Front lower Control Arm—Front & Rear Bush

Suits : Toyota Corolla ZRE140 (05/07-0N)
: Toyota Corolla ZRE150 (05/07-0N)

(Always refer to the current catalogue for complete application listings).

N.B. This install guide should be used in conjunction with the workshop manual.

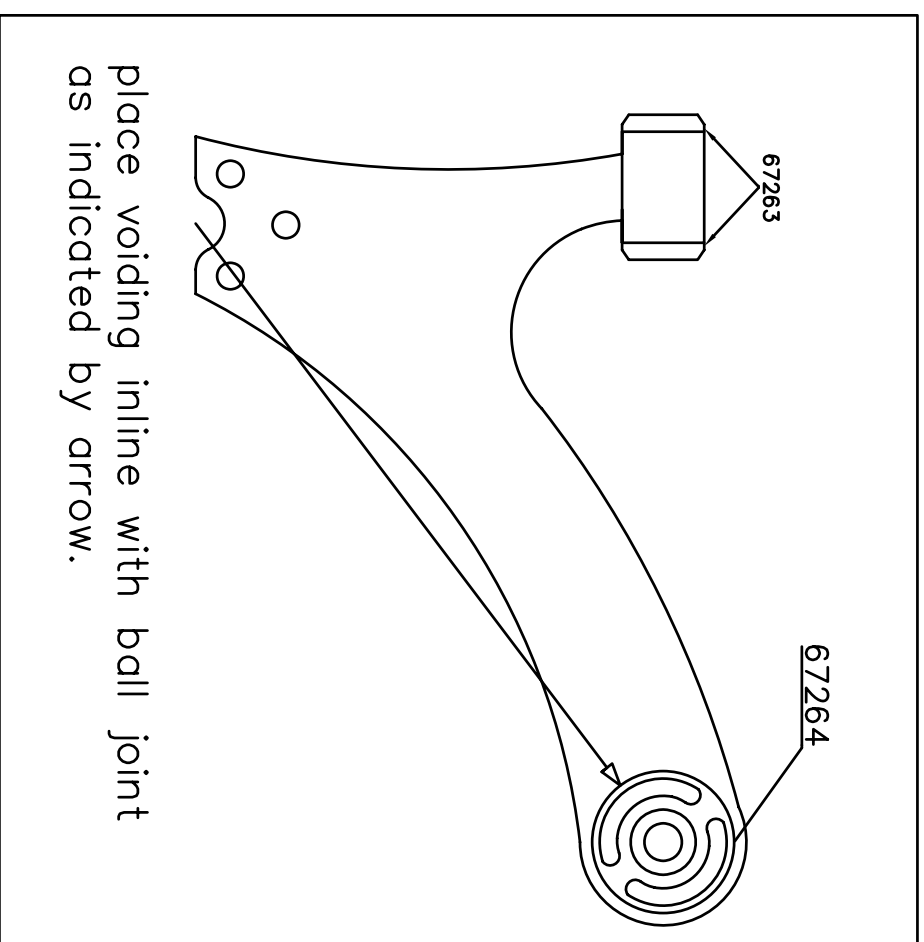

place voiding inline with ball joint
as indicated by arrow.

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.